

# MODBUS RS485 Network Adapter GN-9273 User Manual



Version 1.02

2020 CREVIS co., LTD

---

DOCUMENT CHANGE SUMMARY				
REV	PAGE	REMARKS	DATE	EDITOR
1.00	New Document		2018/07/30	MJ Kwon
1.01	35	Special Register(0x1119)Modbus status, Internal bus status	2019/05/31	MJ Kwon
1.02	8	General specification	2020/07/13	MJ Kwon

## 내용

<b>1</b>	<b>Important Notes</b> .....	6
1.1	<b>Safety Instruction</b> .....	7
1.1.1	<b>Symbols</b> .....	7
1.1.2	<b>Safety Notes</b> .....	7
1.1.3	<b>Certification</b> .....	7
<b>2</b>	<b>Specification</b> .....	8
2.1	<b>The Interface</b> .....	8
2.1.1	<b>GN-9273(MODBUS RS-485)</b> .....	8
2.2	<b>Specification</b> .....	9
2.2.1	<b>General Specification</b> .....	9
2.2.2	<b>Interface Specification</b> .....	10
2.3	<b>LED Indicator</b> .....	11
2.3.1	<b>Module Status LED (MOD)</b> .....	11
2.3.2	<b>Received Data LED (RXD)</b> .....	11
2.3.3	<b>Transmit Data LED (TXD)</b> .....	11
2.3.4	<b>Extension Module Status LED (IOS LED)</b> .....	12
2.3.5	<b>Field Power, System Power Status LED (Field Power, System Power LED)</b> .....	12
<b>3</b>	<b>Dimension</b> .....	12
3.1	<b>GN-9273</b> .....	12
<b>4</b>	<b>Mechanical Set Up</b> .....	13
4.1	<b>Total Expansion</b> .....	13
4.2	<b>Plugging and Removal of the Components</b> .....	13
<b>5</b>	<b>MODBUS Electrical Interface</b> .....	14

5.1	<b>G-Bus System</b> .....	15
5.2	<b>G-Bus Pin Description</b> .....	16
5.3	<b>MODBUS Electrical Interface</b> .....	17
5.3.1	5pin open connector .....	17
5.3.2	MODBUS DIP Switch Setup .....	18
5.3.3	MODBUS Address Setup .....	19
5.3.4	RS232 Port for MODBUS/RTU, Touch Panel or IO-Guide .....	19
5.3.5	Process Image Map .....	20
5.3.6	MODBUS Interface Register/Bit Map .....	20
5.4	<b>Example</b> .....	21
5.4.1	Example of Input Process Image (Input Register) Map .....	21
5.4.2	Example of Output Process Image (Output Register) Map .....	22
6	<b>MODBUS INTERFACE</b> .....	23
6.1	MODBUS Interface Register/Bit Map .....	23
6.2	Supported MODBUS Function Codes .....	23
6.3	MODBUS Transmission Mode .....	24
6.3.1	RTU Transmission Mode .....	24
6.3.2	ASCII Transmission Mode .....	24
6.3.3	1 (0x01) Read Coils .....	24
6.3.4	2 (0x02) Read Discrete Inputs .....	25
6.3.5	3 (0x03) Read Holding Registers .....	26
6.3.6	4 (0x04) Read Input Registers .....	27
6.3.7	5 (0x05) Write Single Coil .....	28
6.3.8	6 (0x06) Write Single Register .....	29

---

6.3.9	8 (0x08) Diagnostics .....	30
6.3.10	15 (0x0F) Write Multiple Coils .....	32
6.3.11	16 (0x10) Write Multiple Registers .....	33
6.3.12	23 (0x17) Read/Write Multiple Registers .....	34
6.3.13	Error Response.....	35
6.4	MODBUS Special Register Map.....	36
6.4.1	Adapter Identification Special Register (0x1000, 4096).....	36
6.4.2	Adapter Watchdog Time, other Time Special Register (0x1020, 4128) .....	36
6.4.3	Adapter Information Special Register (0x1100, 4352) .....	37
6.4.4	Expansion Slot Information Special Register (0x2000, 8192) .....	38
6.5	MODBUS Reference .....	40
7	Trouble Shooting .....	41
7.1	How to diagnose by LED indicator .....	41

## 1 Important Notes

Solid state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation and Maintenance of Solid State Controls describes some important differences between solid state equipment and hard-wired electromechanical devices.

Because of this difference, and also because of the wide variety of uses for solid state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will CREVIS be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, CREVIS cannot assume responsibility or liability for actual use based on the examples and diagrams.

### Warning!



- ✓ **If you don't follow the directions, it could cause a personal injury, damage to the equipment or explosion**
- Do not assemble the products and wire with power applied to the system. Else it may cause an electric arc, which can result into unexpected and potentially dangerous action by field devices. Arching is explosion risk in hazardous locations. Be sure that the area is non-hazardous or remove system power appropriately before assembling or wiring the modules.
- Do not touch any terminal blocks or IO modules when system is running. Else it may cause the unit to an electric shock or malfunction.
- Keep away from the strange metallic materials not related to the unit and wiring works should be controlled by the electric expert engineer. Else it may cause the unit to a fire, electric shock or malfunction.

### Caution!


- ✓ **If you disobey the instructions, there may be possibility of personal injury, damage to equipment or explosion. Please follow below Instructions.**
- Check the rated voltage and terminal array before wiring. Avoid the circumstances over 55°C of temperature. Avoid placing it directly in the sunlight.
- Avoid the place under circumstances over 85% of humidity.
- Do not place Modules near by the inflammable material. Else it may cause a fire.
- Do not permit any vibration approaching it directly.
- Go through module specification carefully, ensure inputs, output connections are made with the specifications. Use standard cables for wiring.
- Use Product under pollution degree 2 environment.

## 1.1 Safety Instruction

### 1.1.1 Symbols

<p><b>DANGER</b></p> 	<p>Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.</p>
<p><b>IMPORTANT</b></p>	<p>Identifies information that is critical for successful application and understanding of the Product.</p>
<p><b>ATTENTION</b></p> 	<p>Identifies information about practices or circumstances that can lead to personal injury, property damage, or economic loss. Attentions help you to identify a hazard, avoid a hazard, and recognize the consequences.</p>

### 1.1.2 Safety Notes

<p><b>DANGER</b></p> 	<p>The modules are equipped with electronic components that may be destroyed by electrostatic discharge. When handling the modules, ensure that the environment (persons, workplace and packing) is well grounded. Avoid touching conductive components, e.g. G-BUS Pin.</p>
---	--

### 1.1.3 Certification

CE Certificate

EN 61000-6-2; Industrial Immunity

EN 61000-6-4; Industrial Emissions

## 2 Specification


### 2.1 The Interface

#### 2.1.1 GN-9273(MODBUS RS-485)

**RS485 Connector**



Dsub 5-Pin (Female)	SignalName	Description
1	RS485+	In/Out, Transceiver Data High
2	RS485-	In/Out, Transceiver Data Low
3	GND	Signal Common
4	Shield	Shield
5	FG	Frame Ground. Internally shorted with Shield

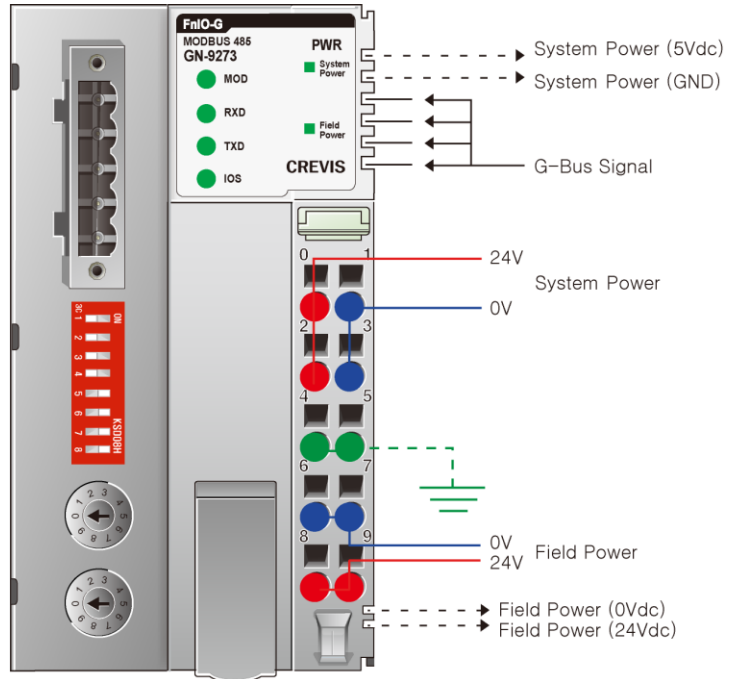

Pin No.	Signal Description	Signal Description	Pin No.
0	System Power, 24V	System Power, Ground	1
2	System Power, 24V	System Power, Ground	3
4	F.G	F.G	5
6	Field Power, Ground	Field Power, Ground	7
8	Field Power, 24V	Field Power, 24V	9



## 2.2 Specification


### 2.2.1 General Specification

General specification	
UL System Power	Supply voltage : 24Vdc nominal, Class 2
System Power	Supply voltage : 24Vdc nominal Supply voltage range : 15~30Vdc Protection : Output current limit (Min. 1.5A) Reverse polarity protection
Power Dissipation	70mA typical @ 24Vdc
Current for I/O Module	1.5A @ 5Vdc
Isolation	System power to internal logic : Non-isolation System power I/O driver : Isolation
UL Field Power	Supply voltage : 24Vdc nominal, Class 2
Field Power	Supply voltage : 24Vdc typical (Max. 30Vdc) * Field Power Range is different depending on IO Module series. Refer to IO Module`s Specification.
Max. Current Field Power Contact	DC 10A Max
Wiring	I/O Cable Max. 2.0mm <sup>2</sup> (AWG14)
Torque	0.8Nm(7 lb-in)
Weight	162g
Module Size	54mm x 99mm x 70mm
Environmental specification	
Operating Temperature	-40°C~70°C
UL Temperature	-20°C~60°C
Storage Temperature	-40°C~85°C
Relative Humidity	5% ~ 90% non-condensing
Mounting	DIN rail

## 2.2.2 Interface Specification

Interface Specification GN-9273(RS-485)	
Adapter Type	Slave node (MODBUS Serial RTU/ASCII Server)
Protocol	MODBUS RTU and ASCII
Max. Expansion Module	63 slots
Max. Data Size(Input + Output)	Max 128 bytes each slot
Max Length Bus Line	1200m
Max. Nodes	99 nodes
Baud Rate	1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
Interface Connector	5 Pin open connector
Settable Node Address	1 ~ 99 with two rotary switches
Serial Port	RS232 for MODBUS/RTU, Touch Panel or IO-Guide
Serial Configuration (RS232)	Node : 1 (Fixed) Baud Rate : 115200 (Fixed) Data bit : 8 (Fixed) Parity bit : No parity (Fixed) Stop bit : 1 (Fixed)
Indicator	6 LED 1 Green/Red, Module Status (MOD) 1 Green, Receive Data (RXD) 1 Green, Transmit Data (TXD) 1 Green/Red, Expansion I/O Module Status (IOS) 1 Green, System Power Status 1 Green, Field Power Status
Module Location	Starter module left side of G-Series system
Field Power Detection	About 14Vdc
General specification	
Shock Operating	IEC 60068-2-27
Vibration Resistance	Based on IEC 60068-2-6 DNVGL-CG-0039 : Vibration Class B, 4g
Industrial Emissions	EN 61000-6-4/A11 : 2011
Industrial Immunity	EN 61000-6-2 : 2005
Installation Position	Vertical and horizontal installation is available
Product Certifications	CE, UL, FCC

## 2.3 LED Indicator

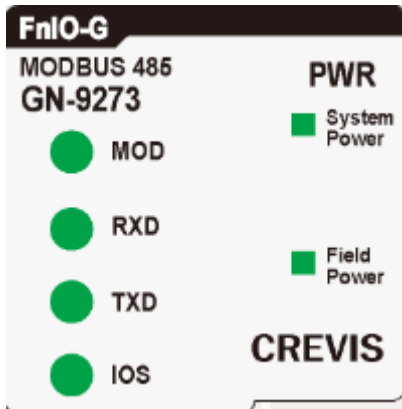

LED No.	LED Function / Description	LED Color
MOD	Module Status	Green/Red
RXD	Receive Data	Green
TXD	Transmit Data	Green
IOS	Expansion Module Status	Green/Red
System Power	System Power Enable	Green
Field Power	Field Power Enable	Green

### 2.3.1 Module Status LED (MOD)

Status	LED	To indicate
Not Powered	OFF	Power is not supplied to the unit.
Device Operational	Green	The unit is operating in normal condition.
Unrecoverable Fault	Red	The device has an unrecoverable fault. - Memory error or CPU watchdog error.

### 2.3.2 Received Data LED (RXD)

Status	LED	To indicate
Not Powered or Not Linked	OFF	Device is idle or may not be powered.
Adapter received correct message frame	Green	Adapter (Slave) received correct frame which address to the slave or broadcast. About 20msec flashing

### 2.3.3 Transmit Data LED (TXD)

Status	LED	To indicate
Not Powered	OFF	Device is idle or may not be powered.
Adapter transmit frame	Flashing Green	Adapter (slave) transmit frame. About 20msec flashing.

### 2.3.4 Extension Module Status LED (IOS LED)


Status	LED	To indicate
Not Powered	OFF	Device may not be powered.
No Expansion Module	Flashing Red	Adapter has no expansion module
Internal Bus Connection, Run Exchanging I/O	Green	Exchanging I/O data.
Expansion Configuration Failed	Red	One or more expansion module occurred in fault state. <ul style="list-style-type: none"> <li>- Detected invalid expansion module ID.</li> <li>- Overflowed Input/ Output Size</li> <li>- Too many expansion module</li> <li>- Initialization failure</li> <li>- Communication failure.</li> <li>- Changed expansion module configuration.</li> <li>- Mismatch vendor code between adapter and expansion module.</li> </ul>

### 2.3.5 Field Power, System Power Status LED (Field Power, System Power LED)

Status	LED	To indicate
No field, System power	OFF	Not supplied 24Vdc field power, 5Vdc system power.
Supplied field, System power	Green	Supplied 24Vdc field power, 5Vdc system power.

## 3 Dimension

### 3.1 GN-9273

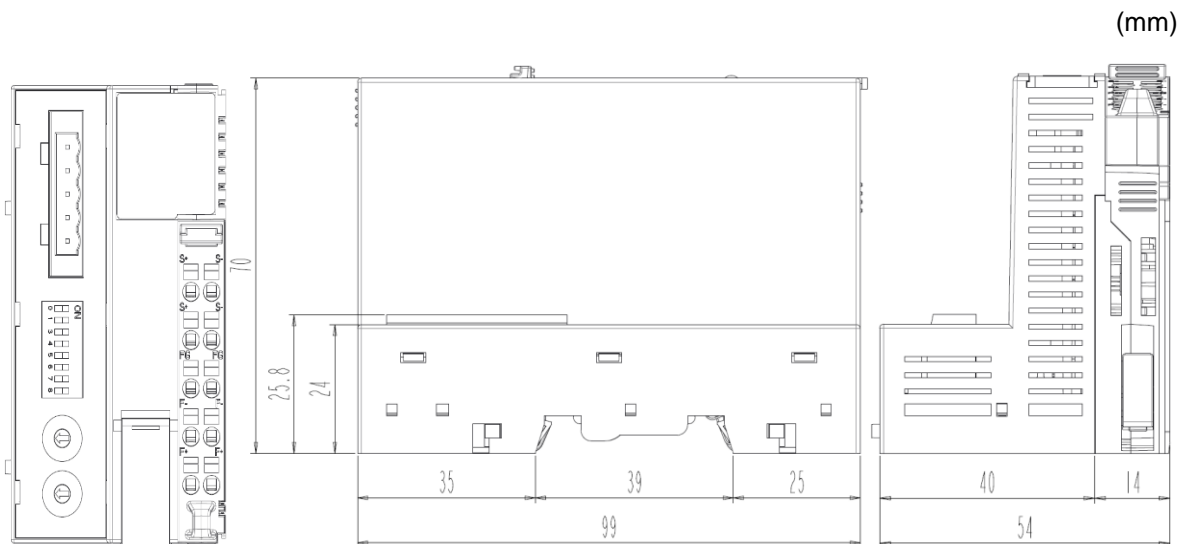

## 4 Mechanical Set Up

### 4.1 Total Expansion

The number of the module assembly that can be connected is 32. So the maximum length is 426mm Exception.

### 4.2 Plugging and Removal of the Components



As above figure in order to safeguard the FnIO module from jamming, it should be fixed onto the DIN rail with locking level. To do so, fold on the upper of the locking lever.


To pull out the FnIO module, unfold the locking lever as below figure.

**DANGER**



Before work is done on the components, the voltage supply must be turned off.

## 5 MODBUS Electrical Interface

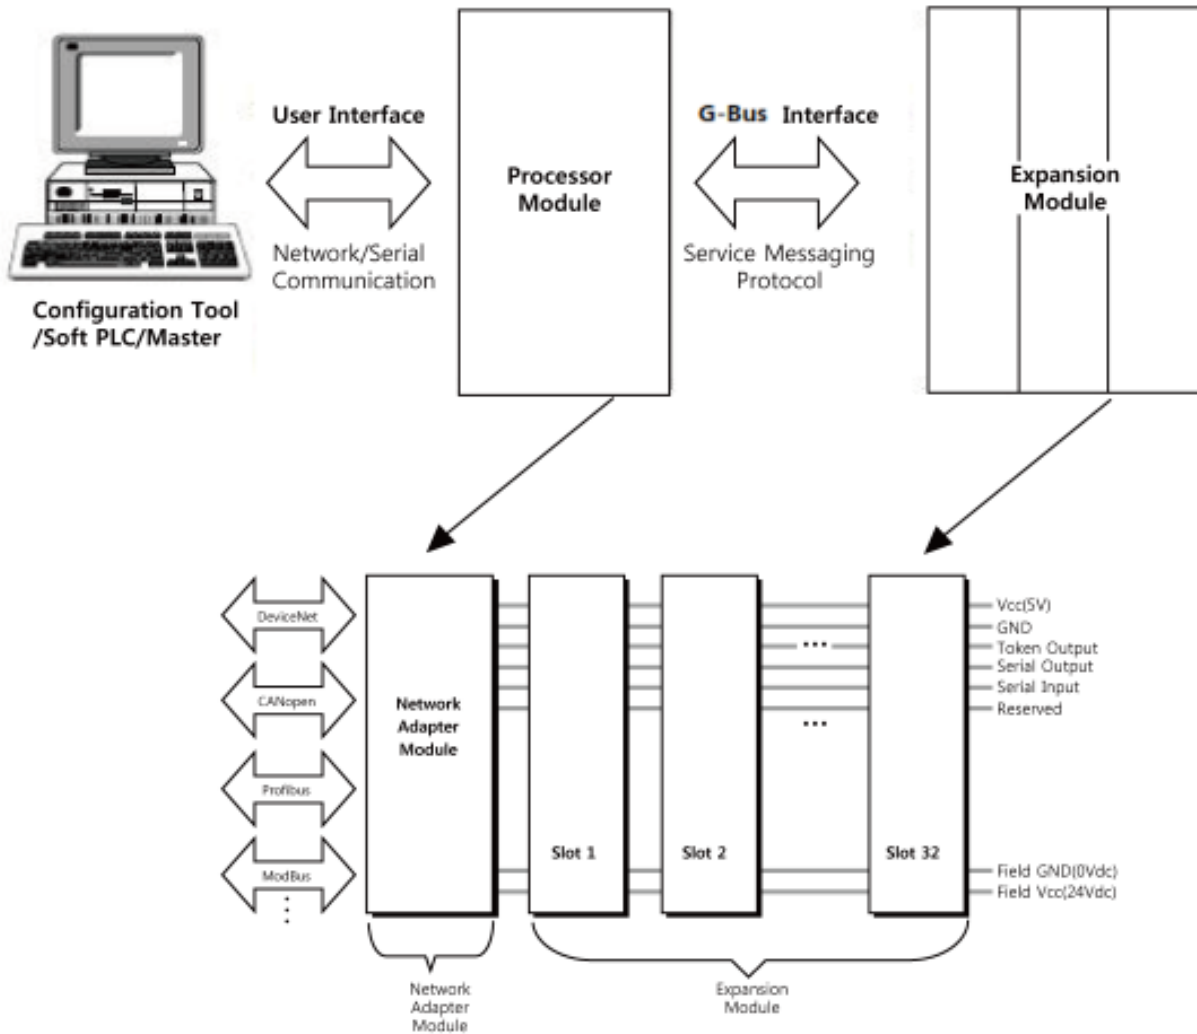

## 5.1 G-Bus System

### • Network Adapter Module

The Network Adapter Module forms the link between the field bus and the field devices with the Expansion Modules.

The connection to different field bus systems can be established by each of the corresponding Network Adapter Module, e.g. for SyncNet, PROFIBUS, CANopen, DeviceNet , Ethernet/IP, CC-Link, MODBUS/Serial, MODBUS/TCP etc.

### • Expansion Module

The Expansion Modules are supported a variety of input and output field devices.


There are digital and analog input/output modules and special function modules.

### • Two types of G-Bus Message

- Service Messaging
- I/O Messaging

## 5.2 G-Bus Pin Description

Communication between the GN series and the expansion module as well as system / field power supply of the bus modules is carried out via the internal bus. It is comprised of 6 data pin and 2 field power pin

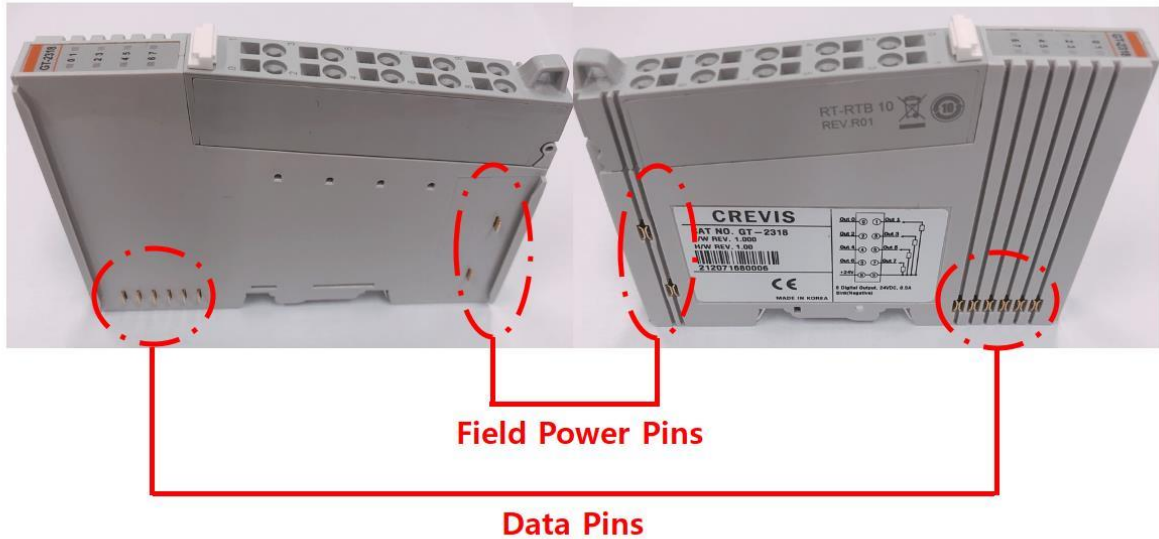

No.	Name	Description
1	Vcc	System supply voltage (5V dc).
2	GND	System Ground.
3	Token Output	Token output port of Processor module.
4	Serial Output	Transmitter output port of Processor module.
5	Serial Input	Receiver input port of Processor module.
6	Reserved	Reserved for bypass Token.
7	Field GND	Field Ground.
8	Field Vcc	Field supply voltage (24Vdc).

**DANGER**




Before work is done on the components, the voltage supply must be turned off.



## 5.3 MODBUS Electrical Interface

### 5.3.1 5pin open connector

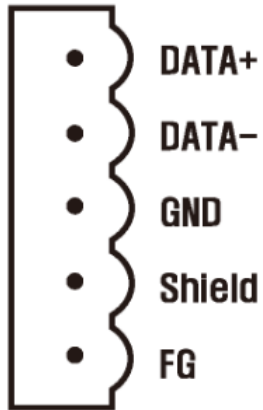

5 Pin Open Connector	Signal Name	Description
1	RS485+	In/Out, Transceiver Data High
2	RS485-	In/Out, Transceiver Data Low
3	GND	Signal Common
4	Shield	Shield
5	FG	Frame Ground. Internally shorted with Shield

-3986-90102/Molex or 1862506/Phoenix

Compatible with DeviceNet 5-pin Open Connector

#### ATTENTION



The use of an incorrect supply voltage or frequency can cause severe damage to the component.

### 5.3.2 MODBUS DIP Switch Setup



Item	Item setup	DIP Switch							
		#1	#2	#3	#4	#5	#6	#7	#8
Baud rate	1200 bps	OFF	OFF	OFF					
	2400 bps	ON	OFF	OFF					
	4800 bps	OFF	ON	OFF					
	9600 bps**	ON	ON	OFF					
	19200 bps	OFF	OFF	ON					
	38400 bps	ON	OFF	ON					
	57600 bps	OFF	ON	ON					
	115200 bps	ON	ON	ON					
Byte Format	8bit, No Parity, 1Stop					OFF	OFF	OFF	
	8bit, Even Parity, 1Stop					ON	OFF	OFF	
	8bit, Odd Parity, 1Stop					OFF	ON	OFF	
	8bit, No Parity, 2Stop					ON	ON	OFF	
	7bit, Even Parity, 1Stop *					ON	OFF	ON	
	7bit, Odd Parity, 1Stop *					OFF	ON	ON	
	8bit, No Parity, 1Stop					ON	ON	ON	
RTU/ASCII Mode	RTU Mode								OFF
	ASCII Mode								ON

\* ASCII Mode is only available

\*\* It is recommended to set the baud rate to 9600bps above when set the parameter using IO Guide Pro.

### 5.3.3 MODBUS Address Setup




Each MODBUS Adapter could have an unique address (from 1 to 99) so that it can be addressed independently from other nodes.  
 The address 0 is reserved to identify a broadcast exchange.  
 No response is returned to broadcast requests sent by the master.

**ATTENTION**



MAC ID addresses have to be unique throughout the entire interconnected Networks.

### 5.3.4 RS232 Port for MODBUS/RTU, Touch Panel or IO-Guide

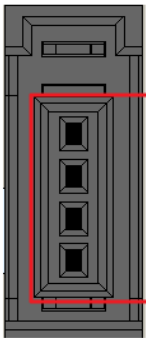

**Pin #1**  
**Pin #2**  
**Pin #3**  
**Pin #4**

Pin#	Signal Name	Description
1	Reserved	----
2	TXD	RS232 TXD
3	RXD	RS232 RXD
4	GND	RS232 GND


**ATTENTION**



The use of an incorrect supply voltage or frequency can cause severe damage to the component.

### 5.3.5 Process Image Map

An expansion module may have 3 types of data as I/O data, configuration parameter and memory register. The data exchange between Network Adapter and expansion modules is done via an I/O process image data by G-Series protocol. The following figure shows the data flow of process image between Network Adapter and expansion modules.

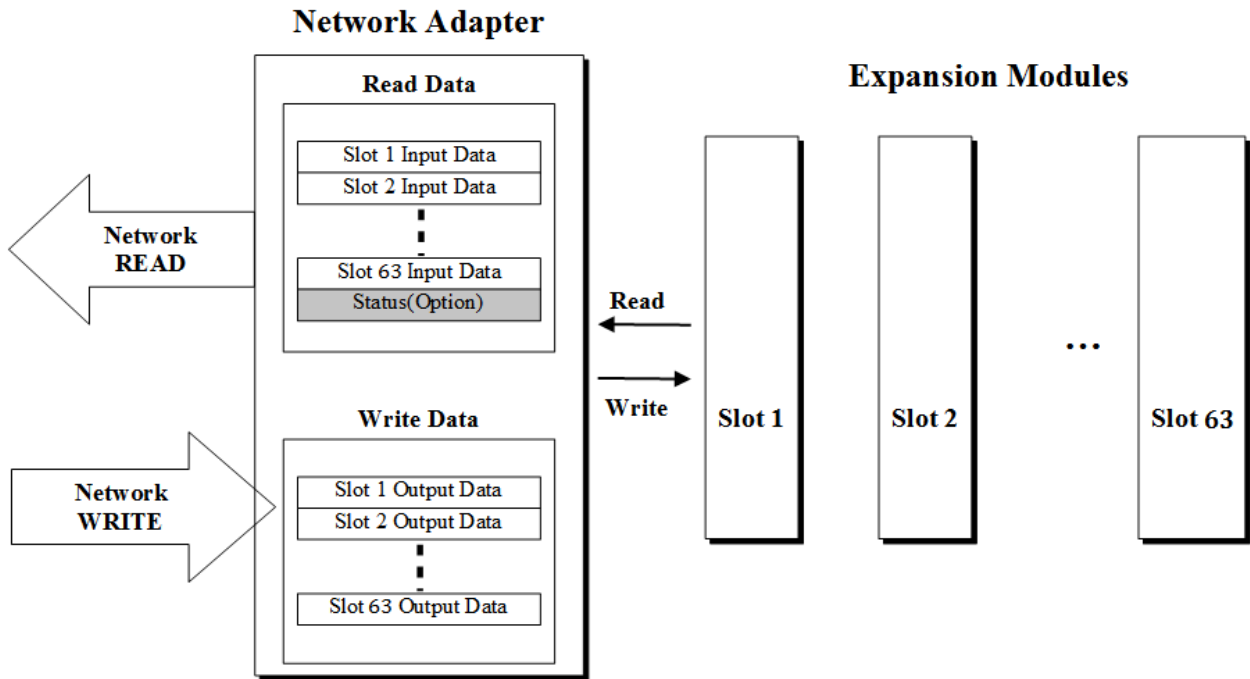

### 5.3.6 MODBUS Interface Register/Bit Map

• Register Map

Start Address	Read/Write	Description	Func. Code
0x0000 ~	Read	Process input image registers (Real Input Register)	3,4,23
0x0800 ~	Read/Write	Process output image registers (Real Output Register)	3,16,23
0x1000 *	Read	Adapter Identification special registers.	3,4,23
0x1020 *	Read/Write	Adapter Watchdog, other time special register.	3,4,6,16,23
0x1100 *	Read/Write	Adapter Information special registers.	3,4,6,16,23
0x2000 *	Read/Write	Expansion Slot Information special registers.	3,4,6,16,23

\* The special register map must be accessed by read/write of every each address (one address).

### • Register Map


Start Address	Read/Write	Description	Func. Code
0x0000~	Read	Process input image bits All input registers area are addressable by bit address. Size of input image bit is size of input image register * 16.	2
0x1000~	Read/Write	Process output image bits All output registers area are addressable by bit address. Size of output image bit is size of output image register * 16.	1,5,15

## 5.4 Example

### 5.4.1 Example of Input Process Image (Input Register) Map

Input image data depends on slot position and expansion slot data type. Input process image data is only ordered by expansion slot position when input image mode is uncompressed (mode 0, 2). But, when input image mode is compressed (mode 1, 3), input process image data is ordered by expansion slot position and slot data type. Input process image mode can be set by special register 0x1114(4372). Refer to 6.3.3.

For example slot configuration

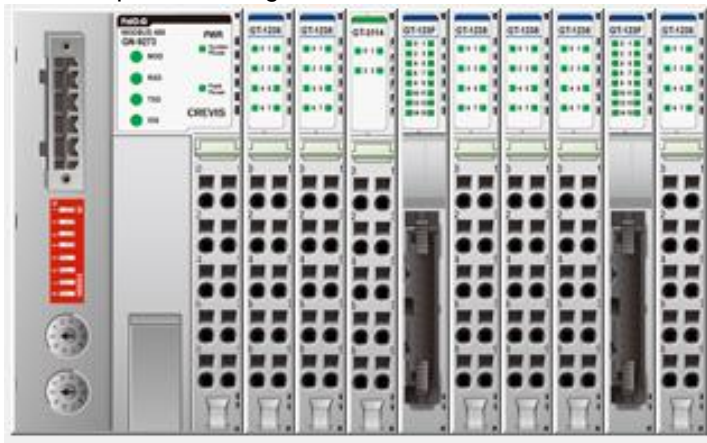


Slot Address	Module Description
#0	MODBUS RS485 Adapter
#1	8-discrete input
#2	8-discrete input
#3	4-analog input
#4	16-discrete input
#5	8-discrete input
#6	8-discrete input
#7	8-discrete input
#8	16-discrete input
#9	8-discrete input

Address	B1 5	B1 4	B1 3	B1 2	B1 1	B1 0	B9	B8	B7	B6	B5	B4	B3	B2	B1	B0
0x0001	Discrete Input 8 pts (Slot#2)							Discrete Input 8 pts (Slot#1)								
0x0002	Analog Input Ch0 high byte (Slot#3)							Analog Input Ch0 low byte (Slot#3)								
0x0003	Analog Input Ch1 high byte (Slot#3)							Analog Input Ch1 low byte (Slot#3)								
0x0004	Analog Input Ch2 high byte (Slot#3)							Analog Input Ch2 low byte (Slot#3)								
0x0005	Analog Input Ch3 high byte (Slot#3)							Analog Input Ch3 low byte (Slot#3)								
0x0006	Discrete Input 8 pts (Slot#4)							Discrete Input 8 pts (Slot#4)								
0x0007	Discrete Input 8 pts (Slot#6)							Discrete Input 8 pts (Slot#5)								
0x0008	Discrete Input 8 pts (Slot#8)							Discrete Input 8 pts (Slot#7)								
0x0009	Discrete Input 8 pts (Slot#9)							Discrete Input 8 pts (Slot#8)								

### 5.4.2 Example of Output Process Image (Output Register) Map

Output image data depends on slot position and expansion slot data type. Output process image data is only ordered by expansion slot position when output image mode is uncompressed (mode 0). But, when output image mode is compressed (mode 1), output process image data is ordered by expansion slot position and slot data type. Output process image mode can be set by special register 0x1115(4373). Refer to 6.3.3.

For example slot configuration

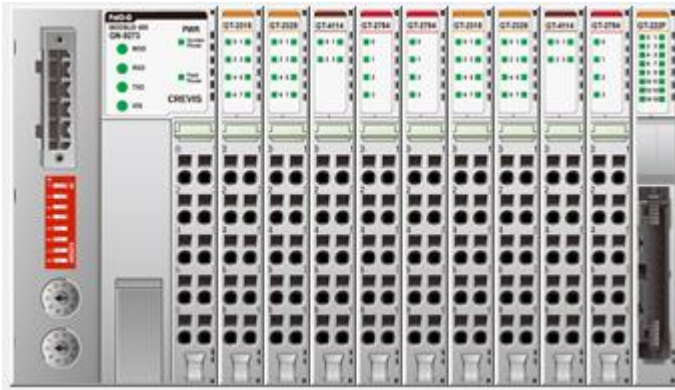

Slot Address	Module Description
#0	MODBUS RS485 Adapter
#1	8-discrete output
#2	8-discrete output
#3	4-analog output
#4	4-relay output
#5	4-relay output
#6	8-discrete output
#7	8-discrete output
#8	4-analog output
#9	4-relay output
#10	16-discrete output

Address	B1 5	B1 4	B1 3	B1 2	B1 1	B1 0	B9	B8	B7	B6	B5	B4	B3	B2	B1	B0
0x0800	Discrete Output 8 pts (Slot#2)						Discrete Input 8 pts (Slot#1)									
0x0801	Analog Output Ch0 high byte (Slot#3)						Analog Input Ch0 low byte (Slot#3)									
0x0802	Analog Output Ch1 high byte (Slot#3)						Analog Input Ch1 low byte (Slot#3)									
0x0803	Analog Output Ch2 high byte (Slot#3)						Analog Input Ch2 low byte (Slot#3)									
0x0804	Analog Output Ch3 high byte (Slot#3)						Analog Input Ch3 low byte (Slot#3)									
0x0805	Empty, Don't Care			Discrete Out 4 pts (Slot#5)			Empty, Don't Care			Discrete Out 4 pts (Slot#4)						
0x0806	Discrete Output low 8 pts (Slot#7)						Discrete Output low 8 pts (Slot#6)									
0x0807	Analog Output Ch0 high byte (Slot#8)						Analog Output Ch0 low byte (Slot#8)									
0x0808	Analog Output Ch1 high byte (Slot#8)						Analog Output Ch1 low byte (Slot#8)									
0x0809	Analog Output Ch2 high byte (Slot#8)						Analog Output Ch2 low byte (Slot#8)									
0x080A	Analog Output Ch3 high byte (Slot#8)						Analog Output Ch3 low byte (Slot#8)									
0x080B	Discrete Output low 8 pts (Slot#10)						Empty, Don't Care			Discrete Out 4 pts (Slot#9)						
0x080C	Empty, Don't Care						Discrete Output high 8 pts (Slot#10)									

## 6 MODBUS INTERFACE

### 6.1 MODBUS Interface Register/Bit Map

#### • Register Map

Start Address	Read/Write	Description	Func. Code
0x0000 ~	Read	Process input image registers (Real Input Register)	3,4,23
0x0800 ~	Read/Write	Process output image registers (Real Output Register)	3,16,23
0x1000*	Read	Adapter Identification special registers.	3,4,23
0x1020*	Read/Write	Adapter Watchdog, other time special register.	3,4,6,16,23
0x1100*	Read/Write	Adapter Information special registers	3,4,6,16,23
0x2000*	Read/Write	Expansion Slot Information special registers	3,4,6,16,23

\* The Special register map must be accessed by read/write of every each address (one address).

#### • Register Map

Start Address	Read/Write	Description	Func. Code
0x0000 ~	Read	Process input image bits All input registers area are addressable by bit address. Size of input image bit is size of input image register * 16.	2
0x1000 ~	Read/Write	Process output image bits All output registers area are addressable by bit address. Size of output image bit is size of output image register * 16.	1,5,15

### 6.2 Supported MODBUS Function Codes

Function Code	Function	Description
1(0x01)	Read Coils	Read output bit
2(0x02)	Read Discrete Inputs	Read input bit
3(0x03)	Read Holding Registers	Read output word
4(0x04)	Read Input Registers	Read input word
5(0x05)	Write Single Coil	Write one bit output
6(0x06)	Write Single Register	Write one word output
8(0x08)	Diagnostics	Read diagnostic register
15(0x0F)	Write Multiple Coils	Write a number of output bits
16(0x10)	Write Multiple registers	Write a number of output words
23(0x17)	Read/Write Multiple registers	Read a number of input words /Write a number of output words

- Refer to MODBUS APPLICATION PROTOCOL SPECIFICATION V1.1a

## 6.3 MODBUS Transmission Mode

Two different serial transmission modes are defined: The RTU mode and the ASCII mode. It defines the bit contents of message fields transmitted serially on the line. It determines how information is packed into the message fields and decoded.

### 6.3.1 RTU Transmission Mode

When devices communicate on a MODBUS serial line using the RTU (Remote Terminal Unit) mode, each 8-bit byte in a message contains two 4-bit hexadecimal characters. The main advantage of this mode is that its greater character density allows better data throughput than ASCII mode for the same baud rate. Each message must be transmitted in a continuous stream of characters.

Start	Address	Function	Data	CRC Check	End
≥ 3.5 char	1 char	1 char	Up to 252 chars(s)	2 chars	≥ 3.5 char

### 6.3.2 ASCII Transmission Mode

When devices are setup to communicate on a MODBUS serial line using ASCII (American Standard Code for Information Interchange) mode, each 8-bit byte in a message is sent as two ASCII characters. This mode is used when the physical communication link or the capabilities of the device does not allow the conformance with RTU mode requirements regarding timers management.

Start	Address	Function	Data	LRC Check	End
1 char “,” “.”	2 chars	2 chars	Up to 2x252 char(s)	2 chars	2 chars CR,LF

#### 6.3.31 (0x01) Read Coils

This function code is used to read from 1 to 2000 contiguous status of coils in a remote device. The Request PDU specifies the starting address, i.e. the address of the first coil specified, and the number of coils. In the PDU Coils are addressed starting at zero. Therefore coils numbered 1-16 are addressed as 0-15. The coils in the response message are packed as one coil per bit of the data field. Status is indicated as 1= ON and 0= OFF.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	-	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x01	0x01	“01”	0x30, 0x31
Starting Address Hi	0x10	0x10	“10”	0x31, 0x30
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Outputs Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Outputs Lo	0x10	0x10	“10”	0x31, 0x30
Error Check (CRC/LRC)	-	0x31, 0x44	“7C”	0x37, 0x43
End of Frame	-	t1-t2-t3	CR, LF	0x0D, 0x0A



## •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,” “;”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x01	0x01	“01”	0x30, 0x31
Byte Count	0x02	0x02	“02”	0x30, 0x32
Output Status	0x00	0x00	“00”	0x30, 0x30
Output Status	0x00	0x00	“00”	0x30, 0x30
Error Check (CRC/LRC)	---	0x40, 0x34	“9A”	0x39, 0x41
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

## 6.3.4.2 (0x02) Read Discrete Inputs

This function code is used to read from 1 to 2000 contiguous status of discrete inputs in a remote device. The Request PDU specifies the starting address, i.e. the address of the first input specified, and the number of inputs. In the PDU Discrete Inputs are addressed starting at zero. Therefore Discrete inputs numbered 1-16 are addressed as 0-15.

The discrete inputs in the response message are packed as one input per bit of the data field. Status is indicated as 1= ON; 0= OFF.

## •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,” “;”	0x3A
Slave Address	0x63	0x63	“07”	0x36, 0x33
Function Code	0x02	0x02	“02”	0x30, 0x32
Starting Address Hi	0x00	0x00	“00”	0x30, 0x30
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Inputs Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Inputs Lo	0x10	0x10	“0A”	0x31, 0x30
Error Check (CRC/LRC)	---	0x71, 0x84	“ED”	0x38, 0x42
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

## •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,” “;”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x02	0x02	“02”	0x30, 0x32
Byte Count	0x02	0x02	“02”	0x30, 0x32
Input Status	0x00	0x00	“00”	0x30, 0x30
Input Status	0x00	0x00	“00”	0x30, 0x30
Error Check (CRC/LRC)	---	0x40, 0x70	“99”	0x39, 0x39
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

### 6.3.53 (0x03) Read Holding Registers

This function code is used to read the contents of a contiguous block of holding registers in a remote device. The Request PDU specifies the starting register address and the number of registers.

The register data in the response message are packed as two bytes per register, with the binary contents right justified within each byte. For each register, the first byte contains the high order bits and the second contains the low order bits.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x03	0x03	“03”	0x30, 0x33
Starting Address Hi	0x10	0x10	“10”	0x31, 0x30
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Register Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Register Lo	0x01	0x01	“01”	0x30, 0x31
Error Check (CRC/LRC)	---	0x88, 0x88	“89”	0x38, 0x39
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

#### •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x03	0x03	“03”	0x30, 0x33
Byte Count	0x02	0x02	“02”	0x30, 0x32
Output Register#0 Hi	0x02	0x02	“02”	0x30, 0x32
Output Register#0 Lo	0xE5	0xE5	“E5”	0x45, 0x35
Error Check (CRC/LRC)	---	0x81, 0x67	“B1”	0x42, 0x31
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

- In case of address 0x0800, 0x0801 output register value: 0x1122, 0x3344.

### 6.3.64 (0x04) Read Input Registers

This function code is used to read from 1 to approx. 125 contiguous input registers in a remote device. The Request PDU specifies the starting register address and the number of registers. The register data in the response message are packed as two bytes per register, with the binary contents right justified within each byte. For each register, the first byte contains the high order bits and the second contains the low order bits.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“.”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x04	0x04	“04”	0x30, 0x34
Starting Address Hi	0x10	0x10	“10”	0x31, 0x30
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Register Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Register Lo	0x01	0x01	“01”	0x30, 0x31
Error Check (CRC/LRC)	---	0x3D, 0x48	“88”	0x38, 0x38
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

#### •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“.”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x04	0x04	“04”	0x30, 0x34
Byte Count	0x02	0x02	“02”	0x30, 0x32
Input Register#0 Hi	0x02	0x02	“02”	0x30, 0x32
Input Register#0 Lo	0xE5	0xE5	“E5”	0x45, 0x35
Error Check (CRC/LRC)	---	0x80, 0x13	“B0”	0x42, 0x30
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

- In case of address 0x0000, 0x0001 input register value: 0x0080, 0x0000.

### 6.3.75 (0x05) Write Single Coil

This function code is used to write a single output to either ON or OFF in a remote device. The requested ON/OFF state is specified by a constant in the request data field. A value of FF 00 hex requests the output to be ON. A value of 00 00 requests it to be OFF. All other values are illegal and will not affect the output.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“;”	0x3A
Slave Address	0x63	0x63	“36”	0x36, 0x33
Function Code	0x05	0x05	“05”	0x30, 0x35
Output Address Hi	0x10	0x10	“10”	0x31, 0x30
Output Address Lo	0x00	0x00	“00”	0x30, 0x30
Output Value Hi	0xFF	0xFF	“FF”	0x46, 0x46
Output Value Lo	0x00	0x00	“00”	0x30, 0x30
Error Check (CRC/LRC)	---	0x80, 0xB8	“8Y”	0x38, 0x59
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

#### •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“;”	0x3A
Slave Address	0x63	0x63	“36”	0x36, 0x33
Function Code	0x05	0x05	“05”	0x30, 0x35
Output Address Hi	0x10	0x10	“10”	0x31, 0x30
Output Address Lo	0x00	0x00	“00”	0x30, 0x30
Output Value Hi	0xFF	0xFF	“FF”	0x46, 0x46
Output Value Lo	0x00	0x00	“00”	0x30, 0x30
Error Check (CRC/LRC)	---	0x80, 0xB8	“8Y”	0x38, 0x59
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

- Output bit of address 0x1001 turns ON.

### 6.3.86 (0x06) Write Single Register

This function code is used to write a single holding register in a remote device. Therefore register numbered 1 is addressed as 0. The normal response is an echo of the request, returned after the register contents have been written.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x06	0x06	“06”	0x30, 0x36
Register Address Hi	0x08	0x08	“08”	0x30, 0x38
Register Address Lo	0x00	0x00	“00”	0x30, 0x30
Register Value Hi	0x00	0x00	“00”	0x30, 0x30
Register Value Lo	0xFF	0xFF	“FF”	0x46, 0x46
Error Check (CRC/LRC)	---	0xC3, 0xA8	“90”	0x39, 0x30
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

#### •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x06	0x06	“06”	0x30, 0x36
Register Address Hi	0x08	0x08	“08”	0x30, 0x38
Register Address Lo	0x00	0x00	“00”	0x30, 0x30
Register Value Hi	0x00	0x00	“00”	0x30, 0x30
Register Value Lo	0xFF	0xFF	“FF”	0x46, 0x46
Error Check (CRC/LRC)	---	0xC3, 0xA8	“90”	0x39, 0x30
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

- In case of address 0x0800 output register value: 0x0000 changes to 0x1122.

### 6.3.98 (0x08) Diagnostics

MODBUS function code 08 provides a series of tests for checking the communication system between a client (Master) device and a server (Slave), or for checking various internal error conditions within a server. The function uses a two-byte sub-function code field in the query to define the type of test to be performed. The server echoes both the function code and sub-function code in a normal response. Some of the diagnostics cause data to be returned from the remote device in the data field of a normal response.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x07	0x07	“07”	0x30, 0x37
Function Code	0x08	0x08	“08”	0x30, 0x38
Sub-Function Hi	0x00	0x00	“00”	0x30, 0x30
Sub-Function Lo	0x00	0x00	“00”	0x30, 0x30
Data Hi	0x11	0x11	“11”	0x31, 0x31
Data Lo	0x22	0x22	“22”	0x32, 0x32
Error Check (CRC/LRC)	---	0x6C, 0x24	“BE”	0x42, 0x45
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

#### •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x07	0x07	“07”	0x30, 0x37
Function Code	0x08	0x08	“08”	0x30, 0x38
Sub-Function Hi	0x00	0x00	“00”	0x30, 0x30
Sub-Function Lo	0x00	0x00	“00”	0x30, 0x30
Data Hi	0x11	0x11	“11”	0x31, 0x31
Data Lo	0x22	0x22	“22”	0x32, 0x32
Error Check (CRC/LRC)	---	0x6C, 0x24	“BE”	0x42, 0x45
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

#### Sub-function 0x0000(0) Return Query Data

The data passed in the request data field is to be returned (looped back) in the response. The entire response message should be identical to the request.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x0000(0)	Any	Echo Request Data	

#### Sub-function 0x0001(1) Restart Communications Option

The remote device could be initialized and restarted, and all of its communications event counters are cleared. Especially, data field 0x55AA make the remote device to restart with factory default setup of EEPROM.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x0001(1)	0x0000 or 0xFF00	Echo Request Data	Reset
0x0001(1)	0x55AA+0xAB7B+Sumcheck	Echo Request Data	Reset with Factory default <sup>1)</sup>
0x0001(1)	0x55AA+0xAA55+Sumcheck	Echo Request Data	Reset with Factory default <sup>2)</sup>

1),2) IP Address, Subnet Mask Address, Gateway Address will be the factory defaults value.

2) Mac Address will be the factory default value.

**Sub-function 0x000A (10) Clear Counters and Diagnostic Register**

The goal is to clear all counters and the diagnostic register. Counters are also cleared upon power-up.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x000A(10)	0x0000	Echo Request Data	

**Sub-function 0x000B (11) Return Bus Message Count**

The response data field returns the quantity of messages that the remote device has detected on the communications system since its last restart, clear counters operation, or power-up.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x000B(11)	0x0000	Total Message Count	

**Sub-function 0x000C (12) Return Bus Communication Error Count**

The response data field returns the quantity of CRC errors encountered by the remote device since its last restart, clear counters operation, or power-up.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x000C(12)	0x0000	CRC Error Count	

**Sub-function 0x000D (13) Return Bus Exception Error Count**

The response data field returns the quantity of MODBUS exception responses returned by the remote device since its last restart, clear counters operation, or power-up.

Exception responses are described and listed in section 3.2.11.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x000D(13)	0x0000	Exception Error Count	

**Sub-function 0x000E (14) Return Slave Message Count**

The response data field returns the quantity of messages addressed to the remote device, or broadcast, that the remote device has processed since its last restart, clear counters operation, or power-up.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x000E(14)	0x0000	Slave Message Count	

**Sub-function 0x000F (15) Return Slave No Response Count**

The response data field returns the quantity of messages addressed to the remote device for which it has returned no response (neither a normal response nor an exception response), since its last restart, clear counters operation, or power-up.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x000F(15)	0x0000	Slave No Response Count	

**Sub-function 0x0064(100) Return Slave ModBus, Internal Bus Status**

The response data field returns the status of ModBus and Internal Bus addressed to the remote device. This status values are identical with status 1 word of input process image.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x0064(100)	0x0000	ModBus, Internal Bus Status	Same as status 1 word

**Sub-function 0x0065(101) Return Slave Watchdog Error Count**

The response data field returns the quantity of watchdog error addressed to the remote device since its last restart, clear counters operation, or power-up.

Sub-function	Data Field (Request)	Data Field (Response)	Description
0x0065(101)	0x0000	Watchdog Error Count	

**6.3.10 15 (0x0F) Write Multiple Coils**

This function code is used to force each coil in a sequence of coils to either ON or OFF in a remote device. The Request PDU specifies the coil references to be forced. Coils are addressed starting at zero. A logical '1' in a bit position of the field requests the corresponding output to be ON. A logical '0' requests it to be OFF. The normal response returns the function code, starting address, and quantity of coils forced.

**•Request**

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x0F	0x0F	“0F”	0x30, 0x46
Starting Address Hi	0x10	0x10	“10”	0x31, 0x30
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Outputs Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Outputs Lo	0x10	0x10	“10”	0x31, 0x30
Byte Count	0x02	0x02	“02”	0x30, 0x32
Output Value#0	0x0F	0x0F	“0F”	0x30, 0x46
Output Value#1	0x00	0x00	“00”	0x30, 0x30
Error Check (CRC/LRC)	---	0x47, 0x73	“5D”	0x35, 0x44
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

**•Response**

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x0F	0x0F	“0F”	0x30, 0x46
Starting Address Hi	0x10	0x10	“10”	0x31, 0x30
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Outputs Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Outputs Lo	0x10	0x10	“10”	0x31, 0x30
Error Check (CRC/LRC)	---	0x58, 0x85	“6E”	0x36, 0x45
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

- In case of address 0x1015~0x1000 output bit value: 00000000\_00000000 changes to 00000001\_01010101.



### 6.3.11 16 (0x10) Write Multiple Registers

This function code is used to write a block of contiguous registers (1 to approx. 120 registers) in a remote device.

The requested written values are specified in the request data field. Data is packed as two bytes per register. The normal response returns the function code, starting address, and quantity of registers written.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x10	0x10	“10”	0x31, 0x30
Starting Address Hi	0x08	0x08	“08”	0x30, 0x38
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Registers Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Registers Lo	0x01	0x01	“01”	0x30, 0x31
Byte Count	0x02	0x02	“02”	0x30, 0x32
Register Value#0 Hi	0x00	0x00	“00”	0x30, 0x30
Register Value#0 Lo	0xFF	0xFF	“FF”	0x46, 0x46
Error Check (CRC/LRC)	---	0xDE, 0xB2	“83”	0x38, 0x33
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

#### •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x10	0x10	“10”	0x31, 0x30
Starting Address Hi	0x08	0x08	“08”	0x30, 0x38
Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Registers Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Registers Lo	0x01	0x01	“01”	0x30, 0x31
Error Check (CRC/LRC)	---	0x0B, 0xEB	“84”	0x38, 0x34
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

- In case of address 0x0800, 0x0801 output register value: 0x0000, 0x0000 changes to 0x1122, 0x3344.

### 6.3.12 23 (0x17) Read/Write Multiple Registers

This function code performs a combination of one read operation and one write operation in a single MODBUS transaction. The write operation is performed before the read. The request specifies the starting address and number of holding registers to be read as well as the starting address, number of holding registers, and the data to be written. The byte count specifies the number of bytes to follow in the write data field.

The normal response contains the data from the group of registers that were read. The byte count field specifies the quantity of bytes to follow in the read data field.

#### •Request

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“;”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x17	0x17	“17”	0x31, 0x37
Read Starting Address Hi	0x00	0x00	“00”	0x30, 0x30
Read Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Read Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Read Lo	0x01	0x01	“01”	0x30, 0x31
Write Starting Address Hi	0x08	0x08	“08”	0x30, 0x38
Write Starting Address Lo	0x00	0x00	“00”	0x30, 0x30
Quantity of Write Hi	0x00	0x00	“00”	0x30, 0x30
Quantity of Write Lo	0x01	0x01	“01”	0x30, 0x31
Byte Count	0x02	0x02	“02”	0x30, 0x32
Write Reg. Value#0 Hi	0x00	0x00	“00”	0x30, 0x30
Write Reg. Value#0 Lo	0xFF	0xFF	“FF”	0x46, 0x46
Error Check (CRC/LRC)	---	0x1B, 0xCC	“7B”	0x37, 0x42
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

#### •Response

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“;”	0x3A
Slave Address	0x63	0x63	“63”	0x36, 0x33
Function Code	0x17	0x17	“17”	0x31, 0x37
Byte Count	0x02	0x02	“02”	0x30, 0x32
Read Reg. Value#0 Hi	0x00	0x00	“00”	0x30, 0x30
Read Reg. Value#0 Lo	0xFF	0xFF	“FF”	0x46, 0x46
Error Check (CRC/LRC)	---	0x04, 0x3C	“85”	0x38, 0x35
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0x0A

- In case of address 0x0800, 0x0801 output register value: 0x0000, 0x0000 changes to 0x1122, 0x3344.

### 6.3.13 Error Response

In an exception response, the server sets the MSB of the function code to 1. This makes the function code value in an exception response exactly 80 hexadecimal higher than the value would be for a normal response.

#### •Exception Response Example

Field name	Example	RTU	ASCII	ASCII (bus line)
Start of Frame	---	t1-t2-t3	“,”	0x3A
Slave Address	0x07	0x07	“07”	0x30, 0x37
Function Code	0x81	0x81	“81”	0x38, 0x31
Exception Code	0x02	0x02	“02”	0x30, 0x32
Error Check (CRC/LRC)	---	0x22, 0xC0	“76”	0x37, 0x36
End of Frame	---	t1-t2-t3	CR, LF	0x0D, 0xA

#### •Exception Codes

Exception Code	Name	Description
01	Illegal Function	The function code received in the query is not an allowable action for the server (or slave).
02	Illegal Data Address	The data address received in the query is not an allowable address for the server (or slave).
03	Illegal Data Value	A value contained in the query data field is not an allowable value for server (or slave).
04	Slave Device Failure	An unrecoverable error occurred while the server (or slave) was attempting to perform the requested action.
05	Acknowledge	The server (or slave) has accepted the request and is processing it, but a long duration of time will be required to do so.
06	Slave Device Busy	Specialized use in conjunction with programming commands. The server (or slave) is engaged in processing a long-duration program command. The client (or master) should retransmit the message later when the server (or slave) is free.
08	Memory Parity Error	The server (or slave) attempted to read record file, but detected a parity error in the memory. The client (or master) can retry the request, but service may be required on the server (or slave) device.
0A	Gateway Path Unavailable	Specialized use in conjunction with gateways, indicates that the gateway was unable to allocate an internal communication path from the input port to the output port for processing the request.

- GN-9273 response exception code 01, 02, 03, 04 and 06.

## 6.4 MODBUS Special Register Map

The special register map can be accessed by function code 3, 4, 6 and 16. Also the special register map must be accessed by read/write of every each address (one address).

### 6.4.1 Adapter Identification Special Register (0x1000, 4096)

Address	Access	Type, Size	Description
0x1000(4096)	Read	1word	Vendor ID = 0x02E5(741), Crevis. Co., Ltd.
0x1001(4097)	Read	1word	Device type = 0x000C, Network Adapter
0x1002(4098)	Read	1word	Product Code = 0x9030
0x1003(4099)	Read	1word	Firmware revision, if 0x0101, revision 1.01
0x1004(4100)	Read	2word	Product unique serial number
0x1005(4101)	Read	String upto 34byte	Product name string (ASCII) "GN-9273,Modbus/485,G-Series"
0x1006(4102)	Read	1word	Sum check of EEPROM
0x1010(4112)	Read	2word	Firmware release date
0x1011(4113)	Read	2word	Product manufacturing inspection date
0x101E(4126)	Read	7word - 1word - 1word - 1word - 1word - 1word - 2word	Composite Id of following address * RTU mode 0x1100(4352), Modbus RS232 Node. (Fixed 0x0001) 0x1000(4096), Vendor ID 0x1001(4097), Device type 0x1002(4098), Product code 0x1003(4099), Firmware revision 0x1004(4100), Product serial number

- String Type consists of valid string length (first 1word) and array of characters

### 6.4.2 Adapter Watchdog Time, other Time Special Register (0x1020, 4128)

A watchdog timer can be configured for timeout periods up to 65535(1unit=100msec). The Watchdog timer will timeout (timer decreased, reached 0) if ModBus operation to the slave node does not occur over the configured watchdog value, then the slave adapter forces that slot output value is automatically set to user-configured fault actions and values.

Address	Access	Type, Size	Description
0x1020(4128)	Read/Write	1word	Watchdog time value 16bits unsigned. The time value is represented by multiples of 100msec. The 0 (watchdog timeout disabled) is default value. A changing of watchdog time value resets watchdog error and counter.
0x1021(4129)	Read	1word	Watchdog timer remain value This value is decreased every 100msec
0x1022(4130)	Read	1word	Watchdog error counter, it is cleared by writing address 0x1020
0x1023(4131)	Read/Write	1word	Enable/disable auto recovery Watchdog error when receiving new frame. 0: Disable, 1: Enable (default). Its value is stored in EEPROM.
0x1028(4136)	Read	1word	IO update time, main loop time. (1usec unit)

### 6.4.3 Adapter Information Special Register (0x1100, 4352)

Address	Access	Type, Size	Description																					
0x1102(4354)	Read	1word	Start address of input image word register. =0x0000																					
0x1103(4355)	Read	1word	Start address of output image word register. =0x0800																					
0x1104(4356)	Read	1word	Size of input image word register.																					
0x1105(4357)	Read	1word	Size of output image word register.																					
0x1106(4358)	Read	1word	Start address of input image bit. = 0x0000																					
0x1107(4359)	Read	1word	Start address of output image bit. =0x1000																					
0x1108(4360)	Read	1word	Size of input image bit.																					
0x1109(4361)	Read	1word	Size of output image bit.																					
0x110A(4362)	Read	1word	Update time for cyclic data change (same as 0x1028)																					
0x110C(4364)	Read	1word	Field power status																					
0x110D(4365)	Read	1word	Current Dip Switch State. ex) DHCP/Bootp enable, Dip SW(0x01) = 0x0101																					
0x110E(4366)	Read	upto 65word	Expansion slot's GT-number including GN First 1word is adapter's number, if GN-9273, then 0x9273																					
0x1110(4368)	Read	1word	Number of expansion slot																					
0x1113(4371)	Read	upto 65word	Expansion slot Module Id. Refer to Appendix A.1 Product List. First 1word is adapter's module id.																					
0x1119(4377)	Read	1word	Hi byte is ModBus status, low byte is internal status. Zero value means 'no error'.																					
			<table border="1"> <thead> <tr> <th>ModBus status</th> <th>Internal bus status(G-Bus)</th> </tr> </thead> <tbody> <tr> <td>0X00 :No Error</td> <td>0X00 : OPERATING</td> </tr> <tr> <td>0X01: ERR_DIP_SWITCH</td> <td>0X01 : COMMUNICATION_FAULT</td> </tr> <tr> <td>0X40:ERR_CRC_LRC</td> <td>0X02 : CONNECT_FAULT</td> </tr> <tr> <td>0X80: ERR_WATCHDOG</td> <td>0X03 : CONFIG_FAULT</td> </tr> <tr> <td></td> <td>0X04: NO_EXPANSION</td> </tr> <tr> <td></td> <td>0X05: INVALID_ATTR_VALUE</td> </tr> <tr> <td></td> <td>0X06: TOO_MUCH_DATA</td> </tr> <tr> <td></td> <td>0X07: VENDOR_ERROR</td> </tr> <tr> <td></td> <td>0X08: NOT_EXPECTED_SLOT</td> </tr> <tr> <td></td> <td>0X09: CRC_ERROR</td> </tr> <tr> <td></td> <td>0X80: NO_FIELD_POWER</td> </tr> </tbody> </table>	ModBus status	Internal bus status(G-Bus)	0X00 :No Error	0X00 : OPERATING	0X01: ERR_DIP_SWITCH	0X01 : COMMUNICATION_FAULT	0X40:ERR_CRC_LRC	0X02 : CONNECT_FAULT	0X80: ERR_WATCHDOG	0X03 : CONFIG_FAULT		0X04: NO_EXPANSION		0X05: INVALID_ATTR_VALUE		0X06: TOO_MUCH_DATA		0X07: VENDOR_ERROR		0X08: NOT_EXPECTED_SLOT	
ModBus status	Internal bus status(G-Bus)																							
0X00 :No Error	0X00 : OPERATING																							
0X01: ERR_DIP_SWITCH	0X01 : COMMUNICATION_FAULT																							
0X40:ERR_CRC_LRC	0X02 : CONNECT_FAULT																							
0X80: ERR_WATCHDOG	0X03 : CONFIG_FAULT																							
	0X04: NO_EXPANSION																							
	0X05: INVALID_ATTR_VALUE																							
	0X06: TOO_MUCH_DATA																							
	0X07: VENDOR_ERROR																							
	0X08: NOT_EXPECTED_SLOT																							
	0X09: CRC_ERROR																							
	0X80: NO_FIELD_POWER																							
0x111D(4381)	Read	1word	Adapter G-Series Revision.																					

\* After the system is reset, the new "Set Value" action is applied.

\*\* If the slot location is changed, set default value automatically (all expansion slot are live).

### 6.4.4 Expansion Slot Information Special Register (0x2000, 8192)

Each expansion slot has 0x20(32) address offset and same information structure.

Slot#1 0x2000(8192)~0x201F(8223) Slot#2 0x2020(8224)~0x203F(8255)  
 Slot#3 0x2040(8256)~0x205F(8287) Slot#4 0x2060(8288)~0x207F(8319)  
 Slot#5 0x2080(8320)~0x209F(8351) Slot#6 0x20A0(8352)~0x20BF(8383)  
 Slot#7 0x20C0(8384)~0x20DF(8415) Slot#8 0x20E0(8416)~0x20FF(8447)  
 Slot#9 0x2100(8448)~0x211F(8479) Slot#10 0x2120(8480)~0x213F(8511)  
 Slot#11 0x2140(8512)~0x215F(8543) Slot#12 0x2160(8544)~0x217F(8575)  
 Slot#13 0x2180(8576)~0x219F(8607) Slot#14 0x21A0(8608)~0x21BF(8639)  
 Slot#15 0x21C0(8640)~0x21DF(8671) Slot#16 0x21E0(8672)~0x21FF(8703)  
 Slot#17 0x2200(8704)~0x221F(8735) Slot#18 0x2220(8736)~0x223F(8767)  
 Slot#19 0x2240(8768)~0x225F(8799) Slot#20 0x2260(8800)~0x227F(8831)  
 Slot#21 0x2280(8832)~0x229F(8863) Slot#22 0x22A0(8864)~0x22BF(8895)  
 Slot#23 0x22C0(8896)~0x22DF(8927) Slot#24 0x22E0(8928)~0x22FF(8959)  
 Slot#25 0x2300(8960)~0x231F(8991) Slot#26 0x2320(8992)~0x233F(9023)  
 Slot#27 0x2340(9024)~0x235F(9055) Slot#28 0x2360(9056)~0x237F(9087)  
 Slot#29 0x2380(9088)~0x239F(9119) Slot#30 0x23A0(9120)~0x23BF(9151)  
 Slot#31 0x23C0(9152)~0x23DF(9183) Slot#32 0x23E0(9184)~0x23FF(9215)  
 Slot#33 0x2400(9216)~0x241F(9247) Slot#34 0x2420(9248)~0x243F(9279)

.....

Slot#63 0x27C0(10176)~0x27DF(10207)

Address Offset	Expansion Slot#1	Expansion Slot#2	Expansion Slot#3	Expansion Slot#4	...	Expansion Slot#63
+ 0x00(+0)	0x2000(8192)	0x2020(8224)	0x2040(8256)	0x2060(8288)	...	0x27C0(10176)
+ 0x01(+1)	0x2001(8193)	0x2021(8225)	0x2041(8257)	0x2061(8289)	...	0x27C1(10177)
+ 0x02(+2)	0x2002(8194)	0x2022(8226)	0x2042(8258)	0x2062(8290)	...	0x27C2(10178)
+ 0x03(+3)	0x2003(8195)	0x2023(8227)	0x2043(8259)	0x2063(8291)	...	0x27C3(10179)
+ 0x04(+4)	0x2004(8196)	0x2024(8228)	0x2044(8260)	0x2064(8292)	...	0x27C4(10180)
+ 0x05(+5)	0x2005(8197)	0x2025(8229)	0x2045(8261)	0x2065(8293)	...	0x27C5(10181)
+ 0x06(+6)	0x2006(8198)	0x2026(8230)	0x2046(8262)	0x2066(8294)	...	0x27C6(10182)
+ 0x07(+7)	0x2007(8199)	0x2027(8231)	0x2047(8263)	0x2067(8295)	...	0x27C7(10183)
+ 0x08(+8)	0x2008(8200)	0x2028(8232)	0x2048(8264)	0x2068(8296)	...	0x27C8(10184)
+ 0x09(+9)	0x2009(8201)	0x2029(8233)	0x2049(8265)	0x2069(8297)	...	0x27C9(10185)
+ 0x0A(+10)	0x200A(8202)	0x202A(8234)	0x204A(8266)	0x206A(8298)	...	0x27CA(10186)
+ 0x0B(+11)	0x200B(8203)	0x202B(8235)	0x204B(8267)	0x206B(8299)	...	0x27CB(10187)
+ 0x0C(+12)	0x200C(8204)	0x202C(8236)	0x204C(8268)	0x206C(8300)	...	0x27CC(10188)
+ 0x0D(+13)	0x200D(8205)	0x202D(8237)	0x204D(8269)	0x206D(8301)	...	0x27CD(10189)
+ 0x0E(+14)	0x200E(8206)	0x202E(8238)	0x204E(8270)	0x206E(8302)	...	0x27CE(10190)
+ 0x0F(+15)	0x200F(8207)	0x202F(8239)	0x204F(8271)	0x206F(8303)	...	0x27CF(10191)
+ 0x10(+16)	0x2010(8208)	0x2030(8240)	0x2050(8272)	0x2070(8304)	...	0x27D0(10192)
+ 0x11(+17)	0x2011(8209)	0x2031(8241)	0x2051(8273)	0x2071(8305)	...	0x27D1(10193)
+ 0x12(+18)	0x2012(8210)	0x2032(8242)	0x2052(8274)	0x2072(8306)	...	0x27D2(10194)
+ 0x13(+19)	0x2013(8211)	0x2033(8243)	0x2053(8275)	0x2073(8307)	...	0x27D3(10195)
+ 0x14(+20)	0x2014(8212)	0x2034(8244)	0x2054(8276)	0x2074(8308)	...	0x27D4(10196)
+ 0x15(+21)	0x2015(8213)	0x2035(8245)	0x2055(8277)	0x2075(8309)	...	0x27D5(10197)
+ 0x16(+22)	0x2016(8214)	0x2036(8246)	0x2056(8278)	0x2076(8310)	...	0x27D6(10198)
+ 0x17(+23)	0x2017(8215)	0x2037(8247)	0x2057(8279)	0x2077(8311)	...	0x27D7(10199)

+ 0x18(+24)	0x2018(8216)	0x2038(8248)	0x2058(8280)	0x2078(8312)	...	0x27D8(10200)
+ 0x19(+25)	0x2018(8217)	0x2038(8249)	0x2058(8281)	0x2078(8313)	...	0x27D9(10201)
+ 0x1A(+26)	0x201A(8218)	0x203A(8250)	0x205A(8282)	0x207A(8314)	...	0x27DA(10202)
+ 0x1B(+27)	0x201B(8219)	0x203B(8251)	0x205B(8283)	0x207B(8315)	...	0x27DB(10203)
+ 0x1C(+28)	0x201C(8220)	0x203C(8252)	0x205C(8284)	0x207C(8316)	...	0x27DC(10204)
+ 0x1D(+29)	0x201D(8221)	0x203D(8253)	0x205D(8285)	0x207D(8317)	...	0x27DD(10205)
+ 0x1E(+30)	0x201E(8222)	0x203E(8254)	0x205E(8286)	0x207E(8318)	...	0x27DE(10206)
+ 0x1F(+31)	0x201F(8223)	0x203F(8255)	0x205F(8287)	0x207F(8319)	...	0x27DF(10207)
Address Offset	Access	Type, Size	Description			
+ 0x00(+0)	Read	1word	Reserved			
+ 0x01(+1)	Read	1word	Reserved			
+ 0x02(+2) **	Read	1word	Input start register address of input image word this slot.			
+ 0x03(+3) **	Read	1word	Input word's bit offset of input image word this slot.			
+ 0x04(+4) **	Read	1word	Output start register address of output image word this slot.			
+ 0x05(+5) **	Read	1word	Output word's bit offset of output image word this slot.			
+ 0x06(+6) **	Read	1word	Input bit start address of input image bit this slot.			
+ 0x07(+7) **	Read	1word	Output bit start address of output image bit this slot.			
+ 0x08(+8) **	Read	1word	Size of input bit this slot			
+ 0x09(+9) **	Read	1word	Size of output bit this slot			
+ 0x0A(+10)**	Read	n word	Read input data this slot			
+ 0x0B(+11)**	Read/Write	n word	Read/write output data this slot			
+ 0x0C(+12) *	Read/Write	1word	Reserved			
+ 0x0E(+14)	Read	1word	GT-number, if GT-1238, returns 0x1238			
+ 0x0F(+15)	Read	String upto 72byte	First 1word is length of valid character string. If GT-1238, returns "00 1E 52 54 2D 31 32 33 38 2C 20 38 44 49 2C 20 32 34 56 64 63 2C 20 55 6E 69 76 65 72 73 61 6C 00 00" Valid character size = 0x001E =30 characters, "GT-1238, 8DI, 24Vdc, Universal"			
+ 0x10(+16)	Read	1word	Size of configuration parameter byte			
+ 0x11(+17)**	Read/Write	n word	Read/write Configuration parameter data, up to 8byte. Refer to A.2 ***			
+ 0x12(+18)	Read	1word	Reserved			
+ 0x13(+19)**	Read/Write	n word	Reserved			
+ 0x14(+20)**	Read/Write	n word	Reserved			
+ 0x15(+21)	Read	2word	Reserved			

+ 0x16(+22)	Read	2word	Reserved
+ 0x17(+23)	Read	2word	Firmware Revision ex) 0x00010010 (Major revision 1 /Minor revision 1, Rev 1.001)
+ 0x18(+24)	Read	1word	Reserved
+ 0x1A(+26)	Read/Write	n word	Reserved
+ 0x1B(+27)	Read/Write	n word	Reserved

\* After the system is reset, the new "Set Value" action is applied.

\*\* Nothing of output, input, and memory or configuration parameter corresponding slot returns Exception 02.

Table 3.3.1. IO Data Code Format (1word)

Item	#15	#14	#13	#12	#11	#10	#9	#8	#7	#6	#5	#4	#3	#2	#1	#0	Word
Field	Output IO code								Input IO code								
Field	Date Type		Data Length						Data Type		Data Length						
<b>Example)</b>																	
GT-3214	0	0	0	0	0	0	0	0	1	0	0	0	0	1	0	0	0x0084
GT-1224	0	0	0	0	0	0	0	0	1	1	0	0	0	1	0	0	0x00C4
GT-1228	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	1	0x0041
GT-4123	1	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0x8200
GT-221F	0	1	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0x4200
GT-2324	1	1	0	0	0	1	0	0	1	1	0	0	0	1	0	0	0xC4C4

<b>Input/output Type:</b> 0 0: No I/O Data 0 1: Byte Data 1 0: Word Data 1 1: Bit Data	<b>Input/output Data Length:</b> 0 0 0 0 0 0: 0 Bit/Byte/Word 0 0 0 0 0 1: 1 Bit/Byte/Word 0 0 0 0 1 0: 2 Bit/Byte/Word 0 0 0 0 1 1: 3 Bit/Byte/Word ... 1 1 1 1 1 1: 63 Bit/Byte/Word
--	--

## 6.5 MODBUS Reference

MODBUS Reference Documents

<http://www.modbus.org>

MODBUS Tools

<http://www.modbustools.com>, modbus poll

<http://www.win-tech.com>, modscan32



## 7 Trouble Shooting

### 7.1 How to diagnose by LED indicator

LED Status	Cause	Action
All LED turns off	- No power	- Check main power Cable
	- System power is not supplied.	- Contact Sales team and send module for repair.
MOD LED flashes green	- Failure of initialization EEPROM parameter.	- Contact Sales team and send module for repair.
MOD LED flashes red	- Excess of expansion slot - Excess of IO size - Wrong IO composition - Occurrence of EEPROM checksum error	- Use expansion slot up to 32. - Compose that IO total size is not excess. - Check composition I/O Module
MOD LED is red	- Wrong address ID - Occurrence critical error in firmware	- Contact Sales team and send module for repair.
I/O LED turns off	- Failure of realization expansion Module - None expansion Module	- Check connector status both NA series and expansion module.
I/O LED flashes red	Failure of configuration baud rate	- Check communication cable with Master - Check power for master.
	Failure of initialization I/O	- Use expansion slot up to 32. - Compose that I/O total size is not excess. NA series notice unidentified expansion module ID. Check status of expansion module.
I/O LED is red	Failure of exchanging I/O data	Check status of expansion I/O connection.
NET LED turns off	Failure of communication with Master	Check main power for master and communication cable.
NET LED flashed green	Failure of exchanging data with master	Check status in software for Master configuration.
NET LED is red	Communication connecting lost	Check BUS line cable for connection with master.
		Check duplication address.

#### How to diagnose when device couldn't communicate network

##### Inspection of wrong or omission cable connection.

- Check status of cable connection for each node.
- Check that all color matches between connector and cable.
- Check wire omission.

##### Terminator resistor

- If terminator resistor is not installed, install terminator resistor
- Check location of terminator resistor

##### Configuration of Node address

- Check duplication node address.

**Configuration of Master**

- Check configuration of master
- Check whether to do download or don't
- Check composition is right
  - Configuration of communication baud rate
  - I/O size
  - Configuration of each node

**Ground and environment**

- Check ground is contacted
- Check environment factor (temperature, humidity, etc.) is in less than regular limit

## APPENDIX A

### A.1 Product List

No.	GT-Number	Description	ID(hex)
<b>Digital Input Module</b>			
1	GT-1238	8 Points, Universal, 24Vdc, 10RTB	1238
2	GT-123F	16 Points, Universal, 24Vdc, 20P connector	123F
3	GT-12DF	16 Points, Universal, 24Vdc, 18RTB	12DF
4	GT-12FA	32 Points, Universal, 24Vdc, 40P connector	12FA
5	GT-1428	8 Sink Input / 8 Source Output with Diagnostic, 24Vdc	1428
6	GT-1804	4 Points, 120Vac, 10RTB	1804
7	GT-1904	4 Points, 240Vac, 10RTB	1904
<b>Digital Output Module</b>			
8	GT-2318	8 Points, Sink, 24Vdc/0.5A, 10RTB	2318
9	GT-2328	8 Points, Source, 24Vdc/0.5A, 10RTB	2328
10	GT-221F	16 Points, Sink, 24Vdc/0.3A, 20P connector	221F
11	GT-222F	16 Points, Source, 24Vdc/0.3A, 20P connector	222F
12	GT-225F	16 Points, Sink, 24Vdc/0.3A, 18RTB	225F
13	GT-226F	16 Points, Source, 24Vdc/0.3A, 18RTB	226F
14	GT-22BA	32 Points, Sink, 24Vdc/0.3A, 40P connector	22BA
15	GT-22CA	32 Points, Source, 24Vdc/0.3A, 40P connector	22CA
16	GT-2418	8 Channels Sink Output with Diagnostics	2418
17	GT-2428	8 Channels Source Output with Diagnostics	2428
18	GT-2618	8 Points, Sink, 24Vdc/2A, 10RTB	2618
19	GT-2628	8 Points, Source, 24Vdc/2A, 10RTB	2628
20	GT-2734	4 Points, MOS Relay, 240Vdc/ac, 0.5A, 10RTB	2734
21	GT-2738	8 Points, MOS Relay Output Terminal, 240Vdc, 0.5A	2738
22	GT-2744	4 Points, Relay, 24Vdc/2A, 240Vac/2A, 10RTB	2744
23	GT-2764	4 Points, MOS Relay, 24Vdc/ac, 2A, 10RTB	2764
24	GT-2768	8 Points, Relay Output Terminal, 24Vdc/ac, 2A	2768
25	GT-2784	4 Points, MOS Relay, 110Vdc/ac, 1A, 10RTB	2784
26	GT-2788	8 Points, Relay Output Terminal, 110Vdc/ac, 1A	2788
<b>Analog Input Module</b>			
27	GT-3002	2ch load cell input unit, strain gauge	3002
28	GT-3114	4 Channels, 0~20, 4~20mA, 12bits, 10RTB	3114
29	GT-3154	4 Channels, 0~20, 4~20mA, 16bits, 10RTB	3154
30	GT-3118	8 Channels, 0~20, 4~20mA, 12bits, 10RTB	3118
31	GT-3158	8 Channels, 0~20, 4~20mA, 16bits, 10RTB	3158
32	GT-311F	16 Channels, 0~20, 4~20mA, 12bits, 20P connector	311F
33	GT-315F	16 Channels, 0~20, 4~20mA, 16bits, 20P connector	315F
34	GT-317F	16 Channels, 0~20, 4~20mA, 12bits, 18RTB	317F
35	GT-319F	16 Channels, 0~20, 4~20mA, 16bits, 18RTB	319F
36	GT-3424	4 Channels, 0~10, 0~5, 1~5Vdc, 12bits, 10RTB	3424
37	GT-3464	4 Channels, 0~10, 0~5, 1~5Vdc, 16bits, 10RTB	3464
38	GT-3428	8 Channels, 0~10, 0~5, 1~5Vdc, 12bits, 10RTB	3428
39	GT-3468	8 Channels, 0~10, 0~5, 1~5Vdc, 16bits, 10RTB	3468
40	GT-342F	16 Channels, 0~10, 0~5, 1~5Vdc, 12bits, 20P connector	342F
41	GT-346F	16 Channels, 0~10, 0~5, 1~5Vdc, 16bits, 20P connector	346F

42	GT-347F	16 Channels, 0~10, 0~5, 1~5Vdc, 12bits, 18RTB	347F
43	GT-349F	16 Channels, 0~10, 0~5, 1~5Vdc, 16bits, 18RTB	349F
44	GT-3704	4 Channels, RTD, 10RTB	3704
45	GT-3708	8 Channels, RTD, 20P connector	3708
46	GT-3804	4 Channels, Thermocouple, 10RTB	3804
47	GT-3808	8 Channels, Thermocouple, 20P connector	3808
48	GT-3714	4 Channels, TEMP. Controller, RTD Input, SSR Output	3714
49	GT-3734	4 Channels, TEMP. Controller, RTD Input, Current Output	3734
50	GT-3814	4 Channels, TEMP. Controller, TC Input, SSR Output	3814
51	GT-3834	4 Channels, TEMP. Controller, TC Input, Current Output	3834
52	GT-3901	AC Measurement	3901
53	GT-3914	4 Channels, Differential, 0~20, 4~20, +/-20mA, 12Bits, 10RTB	3914
54	GT-3934	4 Channels, Differential, 0~20, 4~20, +/-20mA, 16Bits, 10RTB	3934
55	GT-3918	8 Channels, Differential, 0~20, 4~20, +/-20mA, 12Bits, 18RTB	3918
56	GT-3938	8 Channels, Differential, 0~20, 4~20, +/-20mA, 16Bits, 18RTB	3938
57	GT-3924	4 Channels, Differential, 0~5, 0~10, +/-5, +/-10Vdc, 12Bits, 10RTB	3924
58	GT-3944	4 Channels, Differential, 0~5, 0~10, +/-5, +/-10Vdc, 16Bits, 10RTB	3944
59	GT-3928	8 Channels, Differential, 0~5, 0~10, +/-5, +/-10Vdc, 12Bits, 18RTB	3928
60	GT-3948	8 Channels, Differential, 0~5, 0~10, +/-5, +/-10Vdc, 16Bits, 18RTB	3948
<b>Analog Output Module</b>			
61	GT-4114	4CH, 0~20mA, 12Bits, 10RTB	4114
62	GT-4154	4CH, 0~20mA, 16Bits, 10RTB	4154
63	GT-4118	8CH, 0~20mA, 12Bits, 10RTB	4118
64	GT-4158	8CH, 0~20mA, 16Bits, 10RTB	4158
65	GT-4214	4 Channels, Current Output, 4~20mA, 12bits	4214
66	GT-4254	4 Channels, Current Output, 4~20mA, 16bits	4254
67	GT-4218	8 CHANNELS CURRENT OUTPUT, 4~20mA, 12BIT	4218
68	GT-4258	8 CHANNELS CURRENT OUTPUT, 4~20mA, 16BIT	4258
69	GT-4424	4CH, 0~10Vdc, 12Bits, 10RTB	4424
70	GT-4464	4CH, 0~10Vdc, 16Bits, 10RTB	4464
71	GT-4428	8CH, 0~10Vdc, 12Bits, 10RTB	4428
72	GT-4468	8CH, 0~10Vdc, 16Bits, 10RTB	4468
73	GT-442F	16CH, 0~10Vdc, 12Bits, 20P Connector	442F
74	GT-446F	6CH, 0~10Vdc, 16Bits, 20P Connector	446F
75	GT-447F	16CH, 0~10Vdc, 12Bits, 18RTB	447F
76	GT-449F	16CH, 0~10Vdc, 16Bits, 18RTB	449F
77	GT-4524	AO 4 CHs, ±10Vdc, 12Bits, 10RTB	4524
78	GT-4564	AO 4 CHs, ±10Vdc, 16Bits, 10RTB	4564
<b>Special Module</b>			
79	GT-5102	2CH, Encoder, Input, 5Vdc, 10RTB	5102
80	GT-5112	High Speed Counter, 2CHs, 24Vdc, Encoder Input, 10RTB	
81	GT-5114	High Speed Counter, 4CHs, 24Vdc, Encoder Input, 10RTB	
82	GT-5211	1CH, RS 232, RTS/CTS, Full Duplex Type, 10RTB	5211
83	GT-5212	2CH, RS 232, Full Duplex Type, 10RTB	5212
84	GT-5221	1CH, RS 485, Full Duplex Type, 10RTB	5221
85	GT-5231	1CH, RS 485, Half Full Duplex Type, 10RTB	5231
86	GT-5232	2CH, RS 485, Half Full Duplex Type, 10RTB	5232
87	GT-5352	2CH, Synchronous Serial Interface Input, 10RTB	5352
88	GT-5442	PWM Output, 2CHs, 0.5A/24Vdc, Source, 18RTB	5442

89	GT-5444	PWM Output, 4CHs, 0.5A/24Vdc, Source, 18RTB	5444
90	GT-5642	Pulse Output, 2CHs, 0.5A/24Vdc, Source, 18RTB	5642
91	GT-5652	Pulse Output, 2CHs, RS422 (Differential), 18RTB	5652
92	GT-5521	1CH, Stepper Module (TBD)	5521
<b>Power Module</b>			
93	GT-7408	Shield Module	7408
94	GT-7508	Common for 0Vdc	7508
95	GT-7511	Power Expansion, In 24Vdc, Out 1A/5Vdc	7511
96	GT-7518	Common for 24Vdc	7518
97	GT-7588	Common for 0Vdc, 24Vdc	7588
98	GT-7641	Field Power, 5/24/48 Vdc, 110/220 Vac	7641
99	GT-7151	Noise Filter Module, 18RTB, None ID Type	7151
100	GT-7851	Noise Filter Module, 18RTB, ID Type	7851

## A.2. Glossary

- System Power: The power for starting up CPU.
- Field Power: The power for input and output line.
- Terminator Resistor: Resistor for prevention reflected wave.
- EDS: Electronic Data Sheet.
- Sink: The method of in/output power supply if a device has no power source.
- Source: The method of in/output power supply if a device has the power source.

