

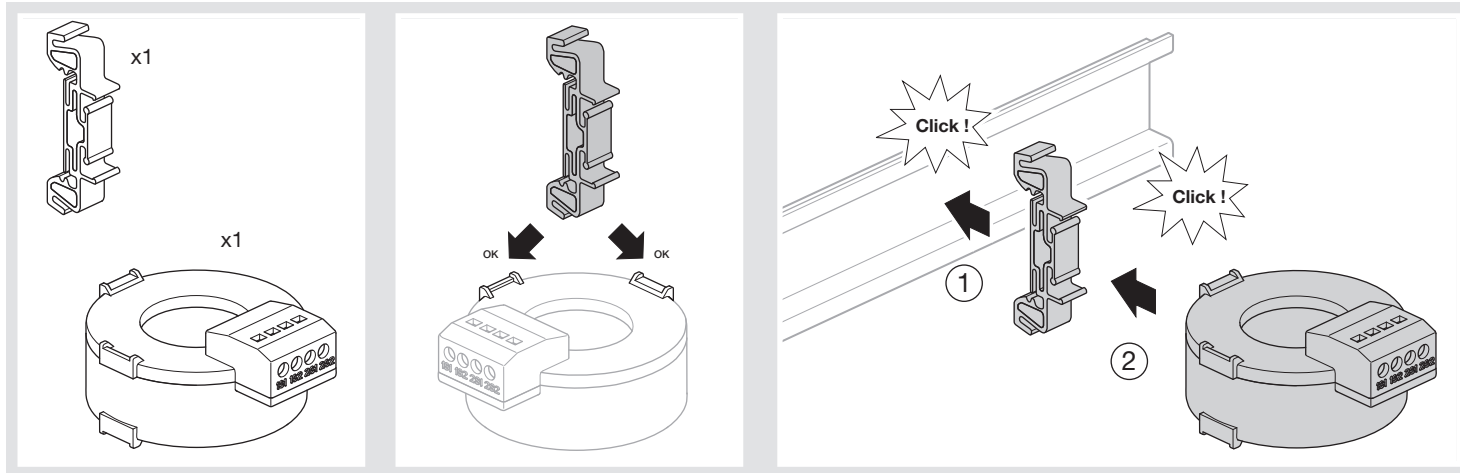
 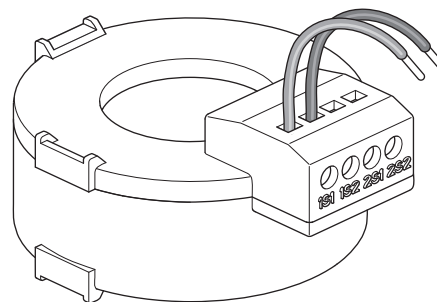
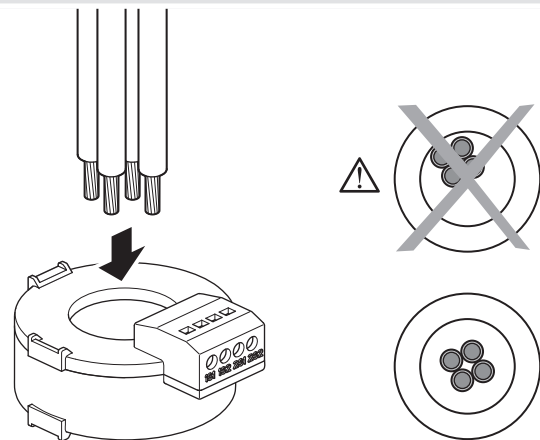


- (FR) Tore pour relais différentiels
- (GB) Torroid for HR relays
- (DE) Wandler für FI Relais
- (NO) Spole for jordfeilreleer HR
- (IT) Toro per rele HR
- (ES) Transformador diferencial
- (PT) Toro para rele HR

- Notice d'instructions
- User instructions
- Bedienungsanleitung
- Bruksanvisning
- Istruzioni d'impiego
- Instrucciones de uso
- Instruções

## HR700



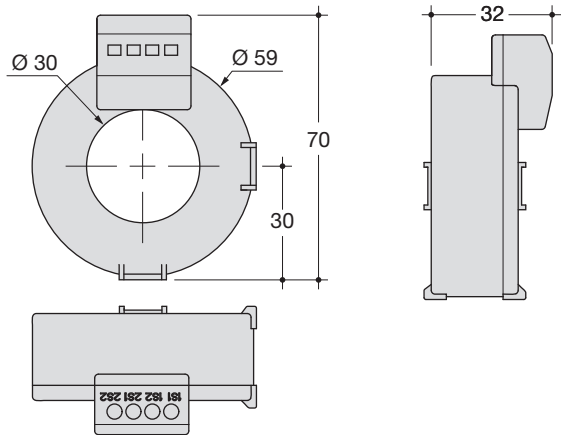

	(mm <sup>2</sup> )	1...1,5
	(mm <sup>2</sup> )	1...1,5